

Hospital TV UR762M (NA)

# UL-Listed Hospital TVs with NanoCell Technology









## NanoCell TECHNOLOGY



\* Conventional refers to LG's UHD TVs without NanoCell technology.

\*\* Image simulated.

## Real 4K Made by Pure Colors

The NanoCell hospital TV delivers a broad spectrum of color and lifelike accuracy with advanced NanoCell technology. Providing more brilliant and clear 4K, its visual experience will make viewers captivated.



# Nano Bezel Adds Sophisticated Ambiance

Bigger yet keeping a sleek look. With its minimal Nano Bezel, the UR762M is designed to blend into any interior while creating a great immersion with a large screen size.

## HOSPITAL-FOCUSED FUNCTIONS



## Pillow Speaker Ready

The NanoCell hospital TV is equipped with the interface compatible with a pillow speaker\* which controls sound and videos on TV directly from a patient's bedside.

\* Pillow speaker is not provided by LG. (sold separately)

## Nurse Call System Ready

Through nurse call system provided by a pillow speaker connected to LG hospital TV, staff can be called immediately for emergency.

## **UL Hospital Grade Listed**

The UR762M is designed for the healthcare and hospital environment, meeting safety requirements by UL.




## Group Telemedicine Ready

LG NanoCell Hospital TV is ready for web-based telemedicine. Without an additional video conferencing equipment, SI can develop and deploy their web applications for 1:1 or 2:1 remote meeting. If necessary, controlling of camera\* angle and zoom during a meeting is also possible.

<sup>\*</sup> Supporting camera: Logitech C310, MS lifecam HD-3000

<sup>\*\*</sup> The feature above requires a separate web application.

## **SMART MANAGEMENT**

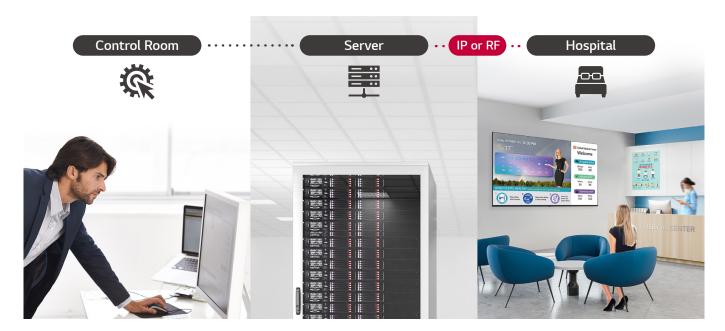

## Pro:Centric Hospital Management Solution

The hospital content management solution Pro:Centric Direct offers easy and simple editing tools, making it easy to perform service and IP network-based remote management. The Pro:Centric Direct solution enables users to edit their interface easily by providing customized interface and efficiently manages all TVs in the hospital.

- \* The actual screen may be slightly different.
- \*\* Some features may not be supported based on PCD versions.



## Easy Set-up

LG's First Use Wizard provides easy and intuitive GUI\* showing detailed initial settings required for hospital use. Without having to enter a complicated code for setting, what managers to do is just selecting the options provided.





#### Pro:Idiom

The UR762M provides embedded Pro:ldiom decryption, unlocking access to high-value digital content with Pro:ldiom DRM (Digital Right Management) which prevents illegal copying of the content.

## **USER CONVENIENCE**



#### SoftAP


Software-enabled Access Point (SoftAP) is a "virtual" Wi-Fi feature that uses TV as a wireless hotspot, enabling patients to connect their own devices to the SoftAP.

- \* SoftAP should be set in the installation menu after the TV is turned on.
- \*\* Screen Share may not be operated at the same time.



## **USB** Cloning

USB data cloning makes managing multiple displays more efficient for optimal operation. Instead of setting up each display one by one, data can be copied to a USB for one display, and be sent to the other displays through a USB plug-in.

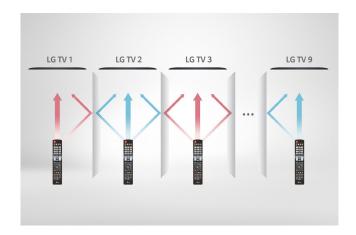

#### Multi IR

Multi IR\* function eliminates the signal interference of remote controls that occurs between multiple TVs in one place. LG NanoCell hospital TV supports this, so users can freely control their own TVs without disturbing the others.

<sup>\*</sup> Separately purchased multi-IR remote controller

## PRODUCT INFORMATION




#### **UR762M (NA)**


Design	Stand Type	No Stand
Display	Inch	75"
	Resolution	3,840 × 2,160 (UHD)
	Category	Pro:Centric Smart
Broadcasting System	Digital	ATSC, Clear QAM, Analog NTSC
	Analog	NTSC
Solution	Pro:Centric (Smart, Cloud, Direct, V, Server), Quick Menu	

## **DIMENSION**

(unit: mm)

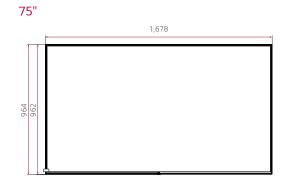




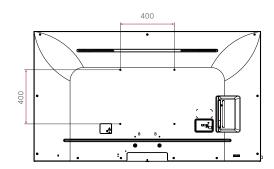


## CONNECTIVITY

#### Rear

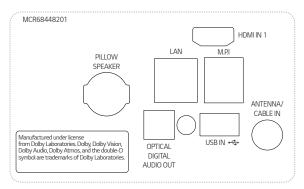

#### Side



\* Dimensions & Jack Panels may differ from the above image, so please contact LG sales team to verify before ordering.









